


PIPE INSTALLATION NOTES:

1. FIELD CUT PIPE TO APPROPRIATE LENGTH.
2. LAY PIPE LENGTHS ONTO RAIL UPRIGHT PIPE SADDLE BRACKET w/ STARTER HOLES.
3. SCREW (2) 12-24 X 1 1/4" TRAXX #5 SELF TAPPING SCREWS THRU HOLE IN SADDLE BRACKET INTO SCHEDULE 40 PIPE. APPLY DOWNWARD PRESSURE ON PIPE WHILE SCREWING IN TRAXX SCREW.

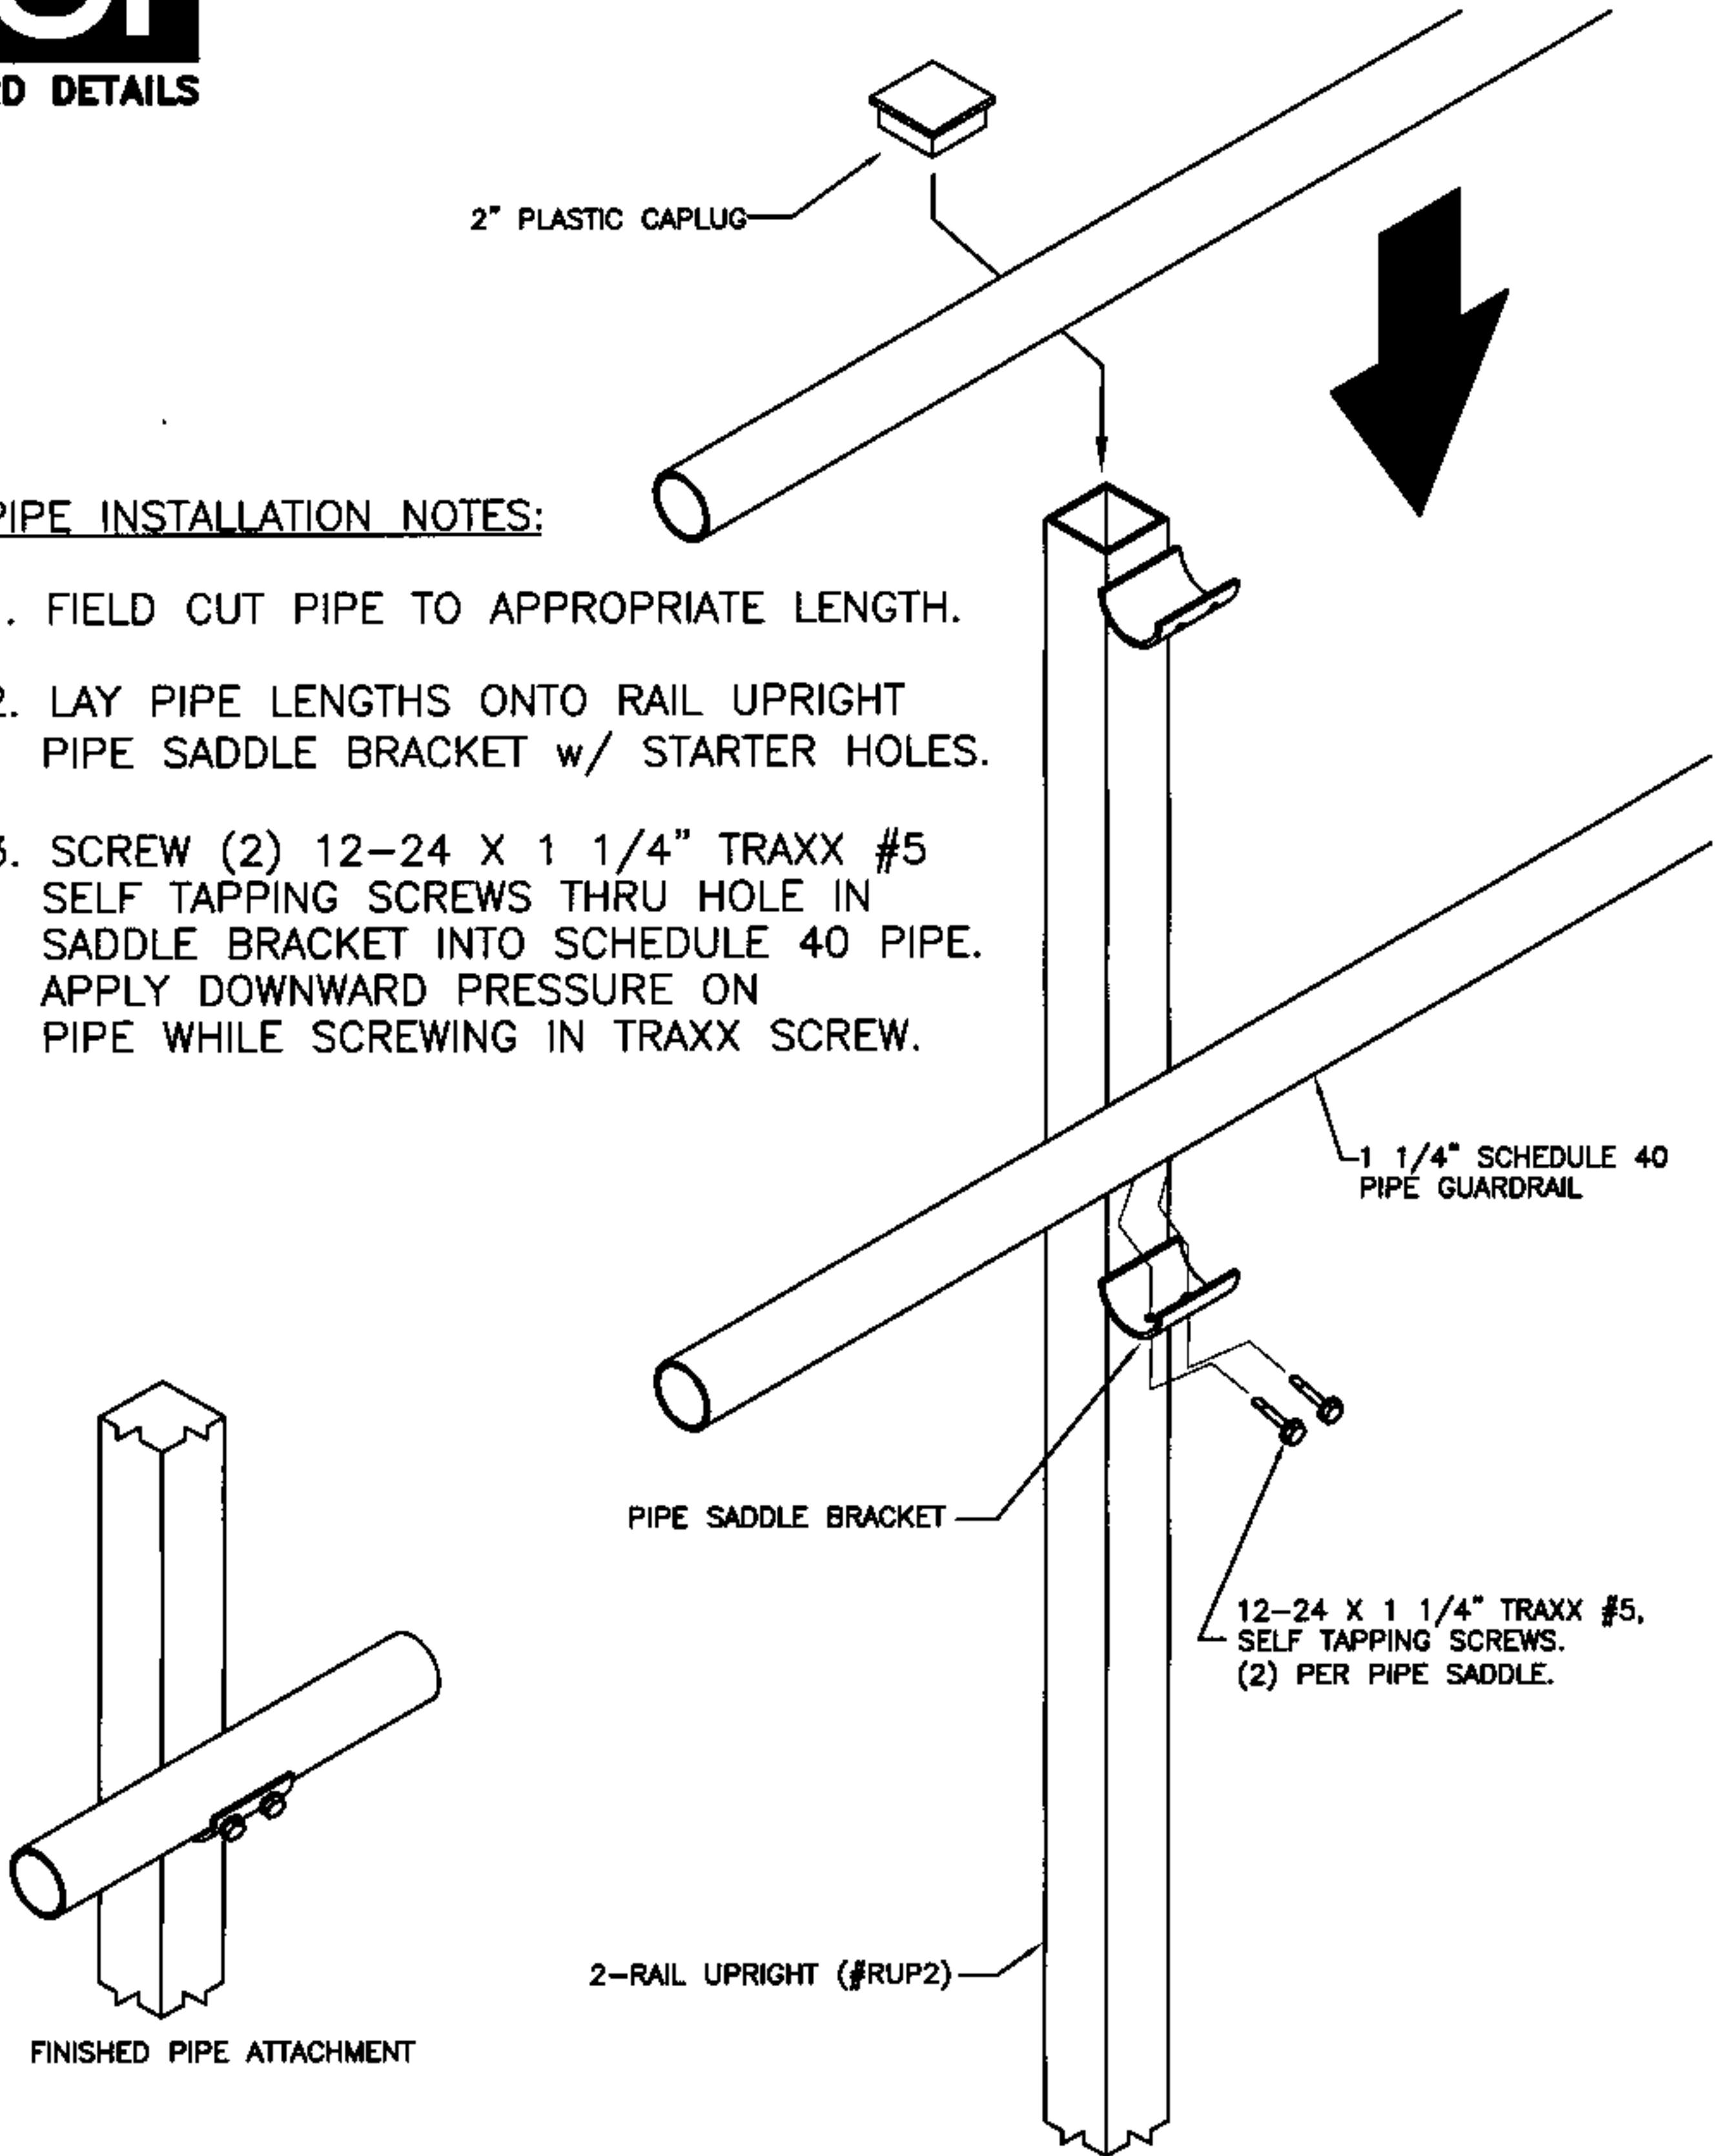

DETAIL 35

RAIL PIPE & CAPLUG INSTALLATION DETAIL (2-RAIL)